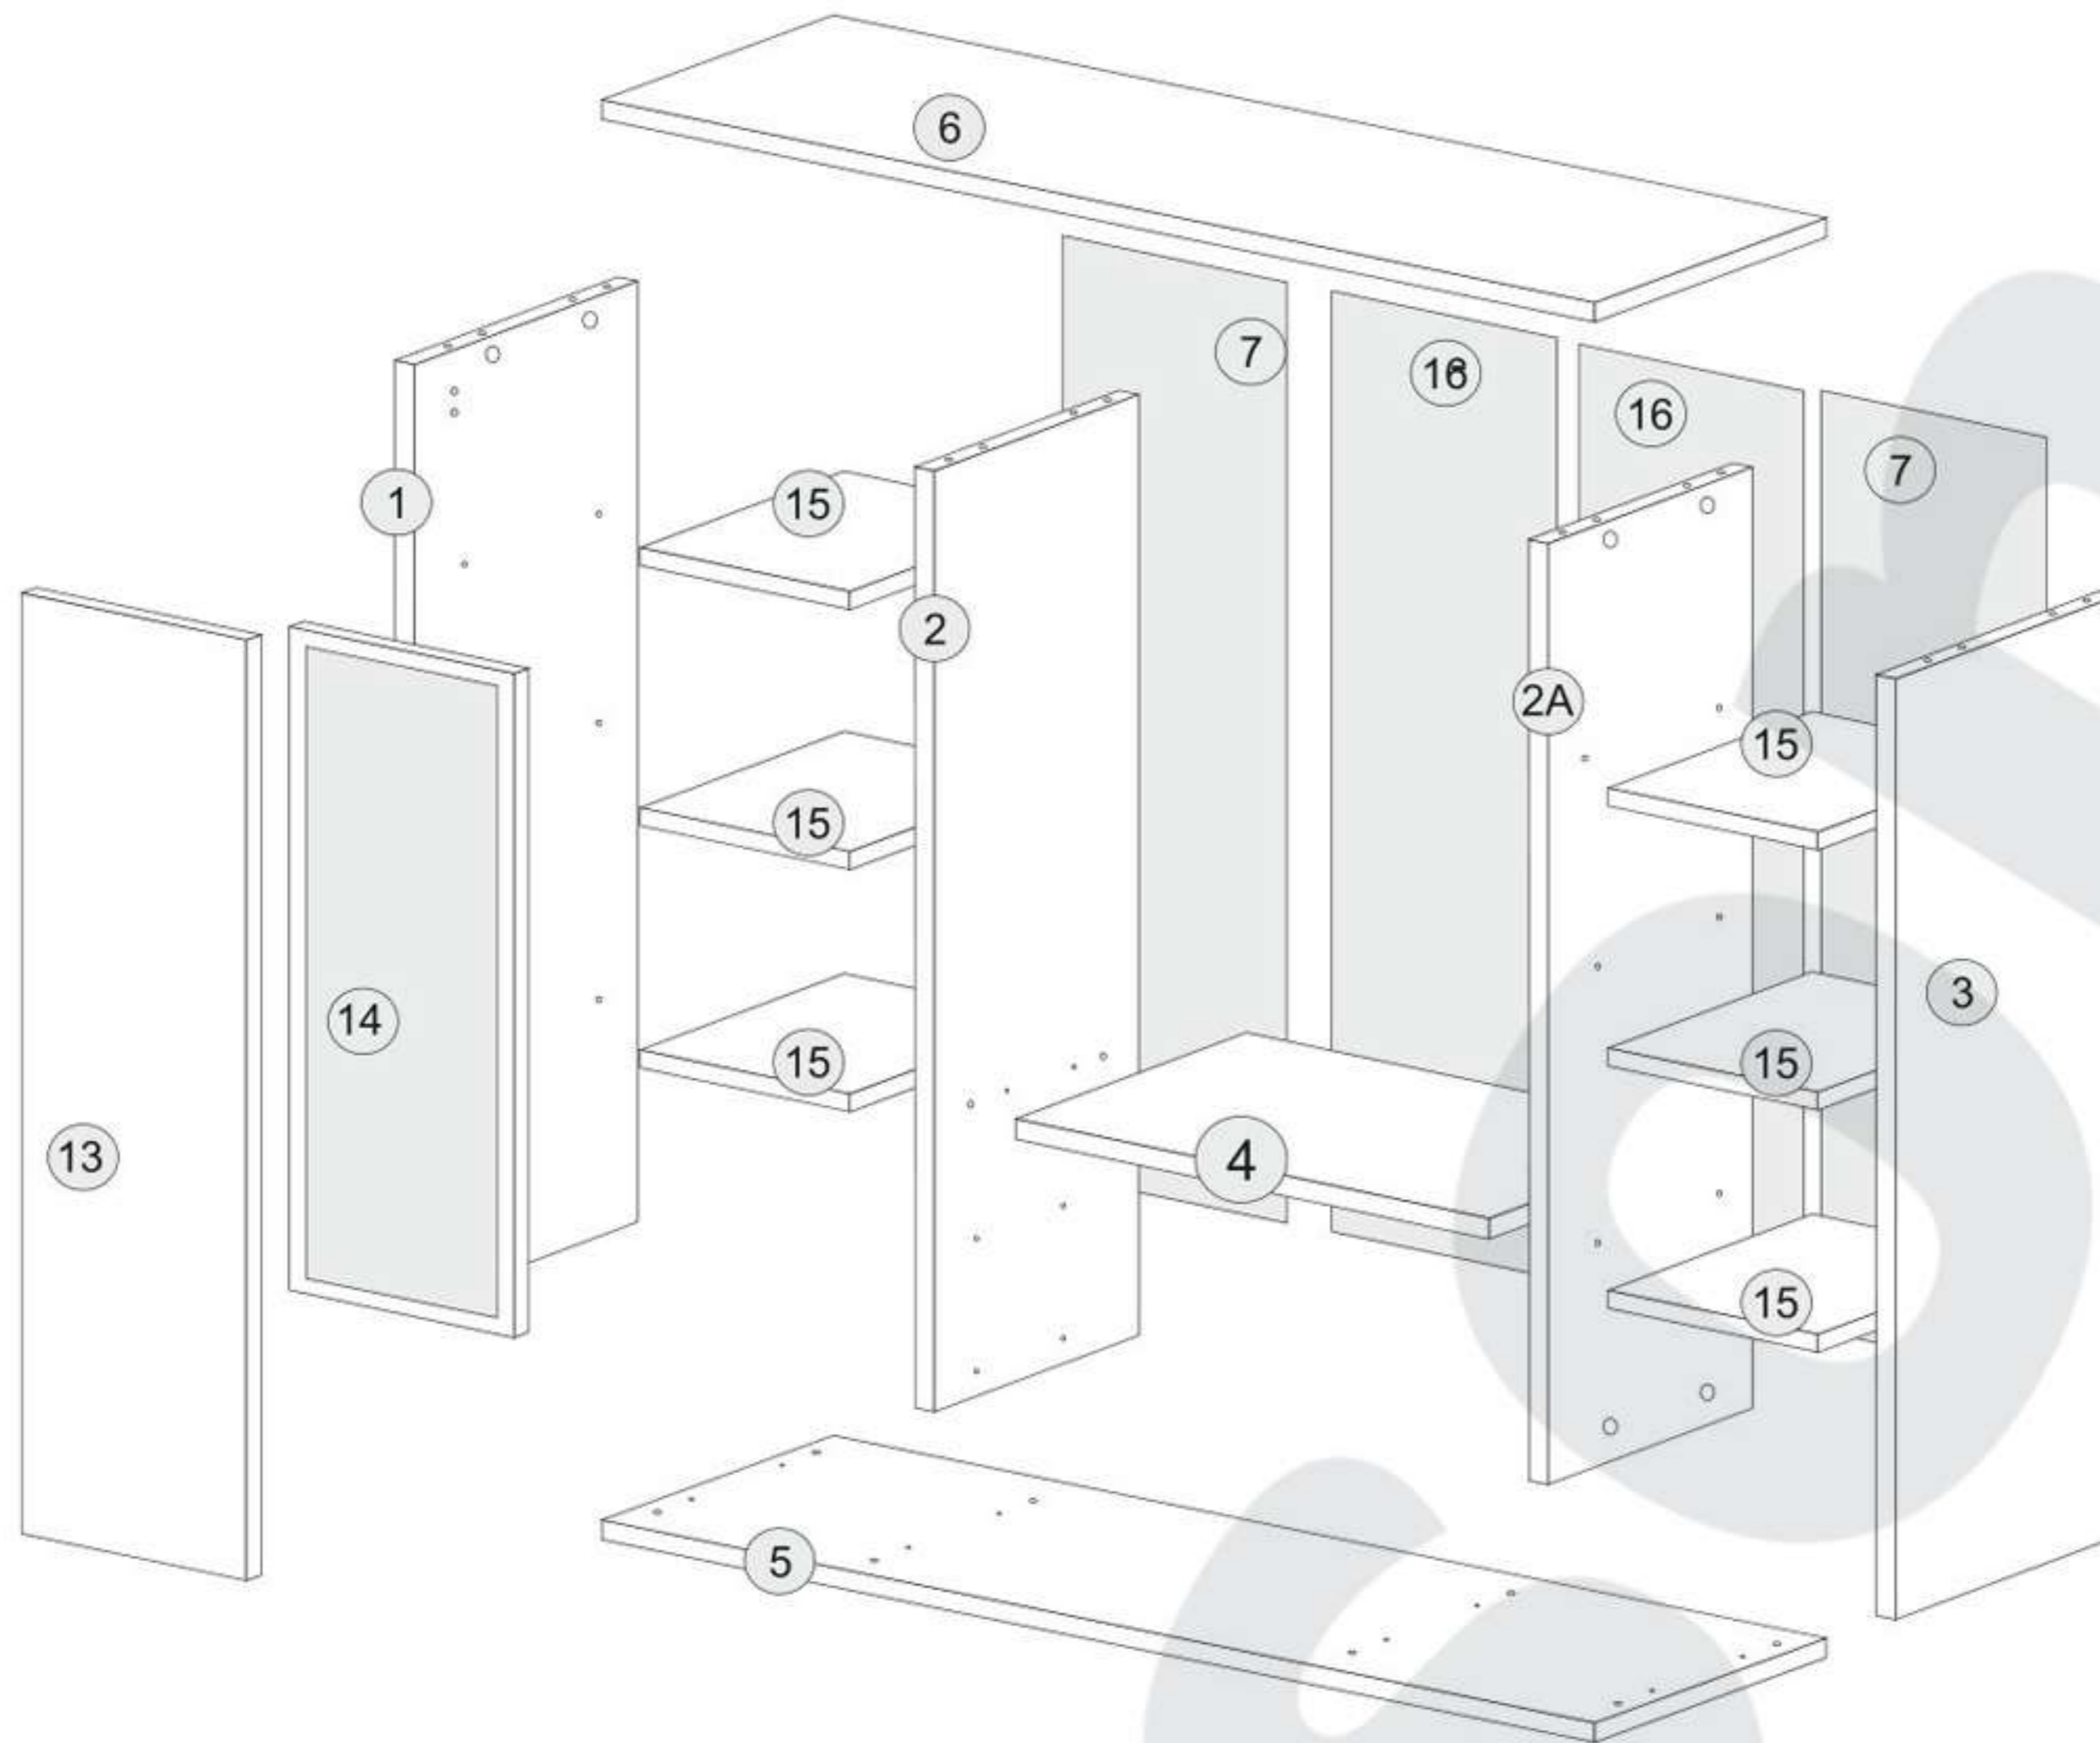 
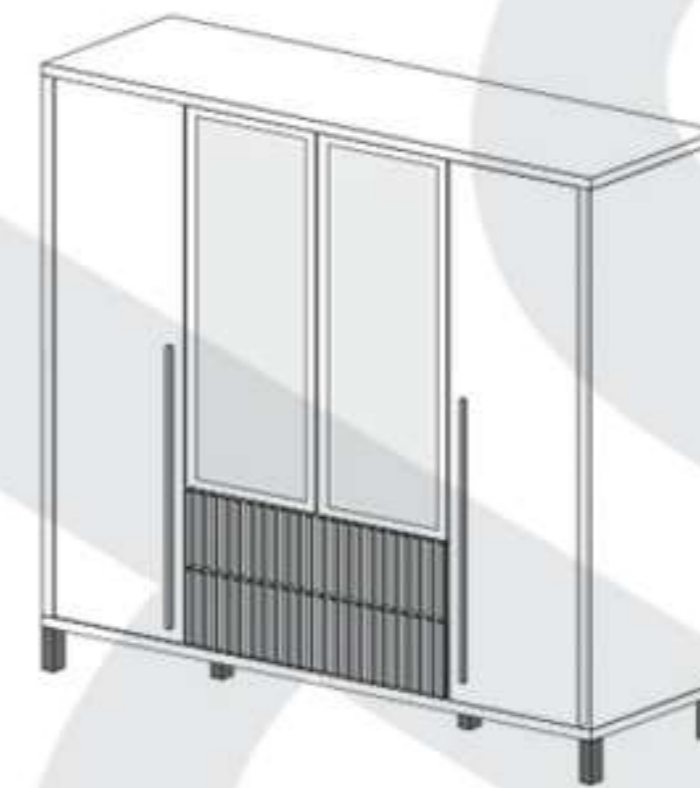 
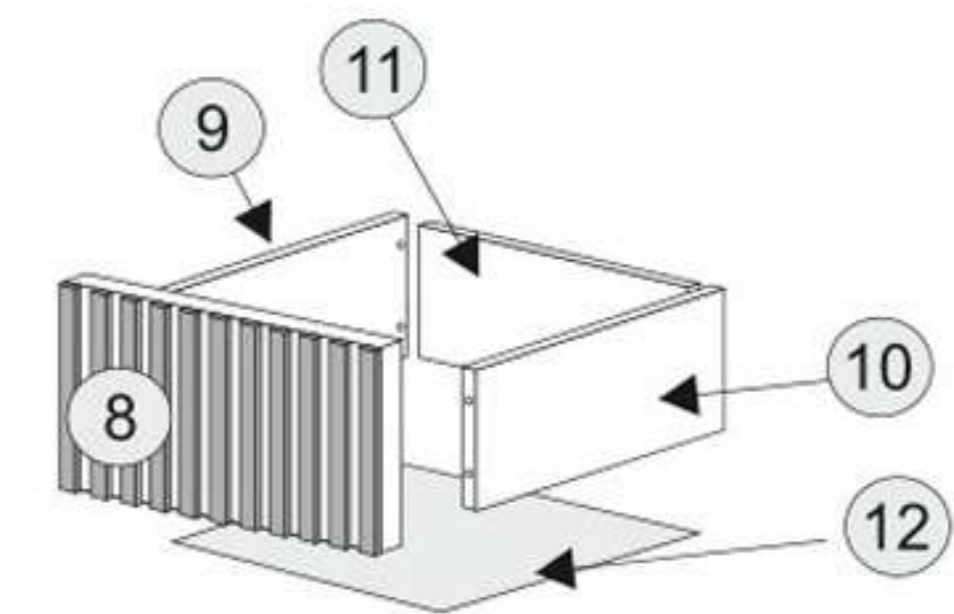 


LENTEY 160 (Szafa / Skriňa / Szekrény)

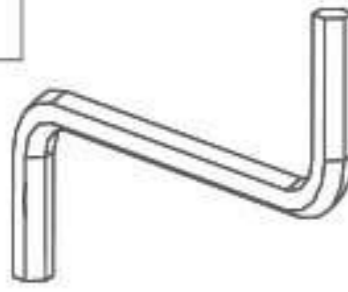 
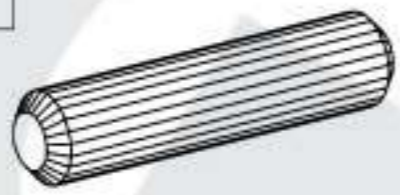 
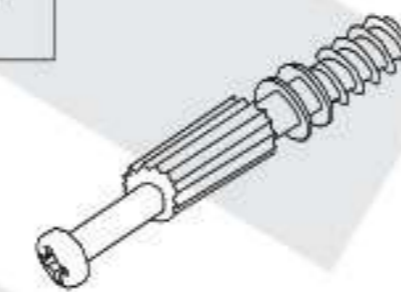 
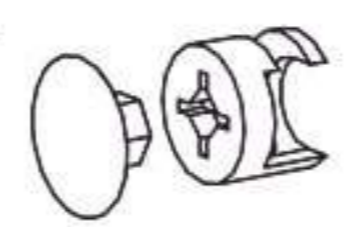 
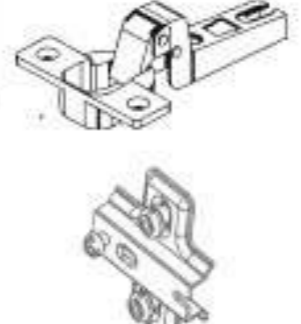 


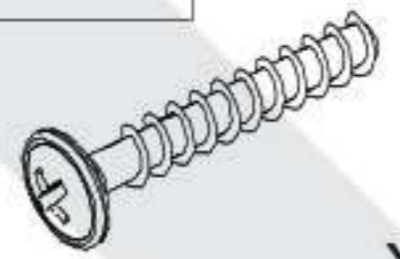 

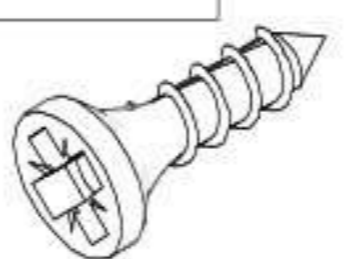 

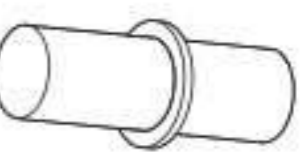 


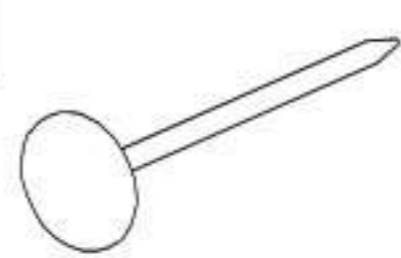 
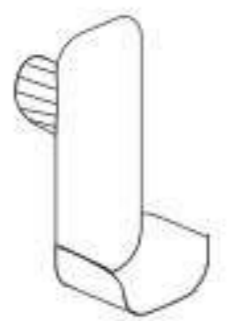 
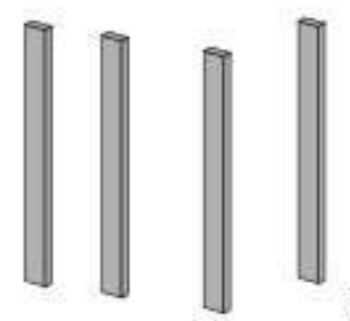 

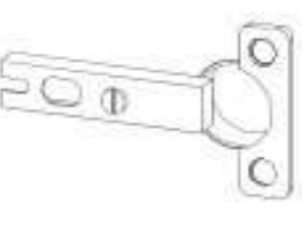 
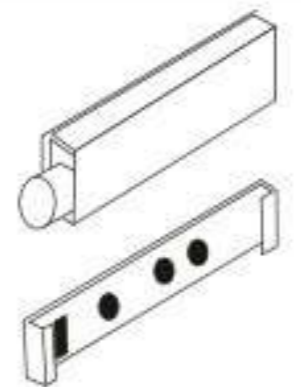 
- | | | |
|----|----------------------|-----------------------|
| PL | Instrukcja montażu | Karta gwarancyjna |
| D | Aufbauanleitung | der Garantieschein |
| GB | Assembly instruction | Guarantee certificate |
| SK | Návod na montáž | Záručný list |
| HU | Szerelési útmutató | Garancialevél |



	Wymiar / Size / Rozmer / Méret	X
1	1868x500	1
2	1868x482	1
2A	1868x482	1
3	1868x500	1
4	744x482	1
5	1582x500	1
6	1582x500	1
7	1898x409	2
8	770x242	2
9	400x150	2
10	400x150	2
11	686x150	2
12	716x405	2
13	1862x384	2
14	1370x384	2
15	386x482	6
16	1898x380	2



Akcesoria - Accessories - die Accessoires - Príslušenstvo - Tartozékok

A  x1	B  x36	C  x20	D  x20	E  x6	L  x10
F 3.5x13  x8	G 4x25  x92	H  x1	N 3.5x16  x28	J  x2	I  x24
O  O1 O2 O3 O4	S  x6	M.  x120	K  x2	LA  x44	
DR  x1	EL  x4	WE  x2			

